

Prospect – Verde Mural Wallpaper

This large-scale artwork was translated from original paintings. Available as 33" x 13.5' silk panels that can be trimmed to ceiling height. A complete mural artwork includes 6 wallpaper panels (A,B,C,D,E,F). All production is done per order and takes up to 5 weeks to ship. Please be sure to order a sample before purchasing custom panels.

This wallcovering is a 100% silk. It is a delicate, hand-woven, earth-friendly silk backed with chemical-free paper and printed with water-based latex inks. This material is suitable for residential and low-traffic commercial locations.



Mural Wallpaper	A complete mural is 6 panels wide (A, B, C, D, E, F). Panels repeat horizontally but not vertically.
Mural Artwork	198” wide x 13.5’ long
Panel Width	33”
Panel Length	Mural panels are 13.5’ long; trim to ceiling height.

Pricing	Sold by the panel
Selvage	1” paper comes untrimmed
Sample Size	8.5” x 11”; shows a section of the artwork at full scale

Wallpaper Type	100% Silk
Material	100% Silk backed with chemical free paper
Print Method	Digital latex water-based ink system
Lead Time	3-5 weeks **Rush Service subject to availability. Rush fee does not include expedited shipping.

Care	Not Wipeable. When cleaning silk wallpaper, the best approach is to lightly dust it or use a vacuum cleaner with a soft brush attachment. Avoid using magic eraser sponges, any form of scrubbing, or moisture-based cleaning products, as they will damage the fibers and potentially leave unsightly watermarks. If you need to remove small stains, use a cotton swab and a mild soap and water cleaning solution, taking care to dab gently and not to rub or scrub the wallpaper. Never use solvents or alcohol.
Fire Rating	Class A (ASTM E84)
Color & Scale	We always strive for color accuracy but please note that colors shown on the website are a representation only. Please refer to the actual product sample. **Also due to varying ink/print systems wallpapers and fabrics of the same pattern are not always an exact match in color or scale.
Made In	USA

33" x 13.5' long panels
pictured below
in Prospect —
Verde Mural Wallpaper

Panel A


Panel B

Panel C

Panel D

Panel E

Panel F

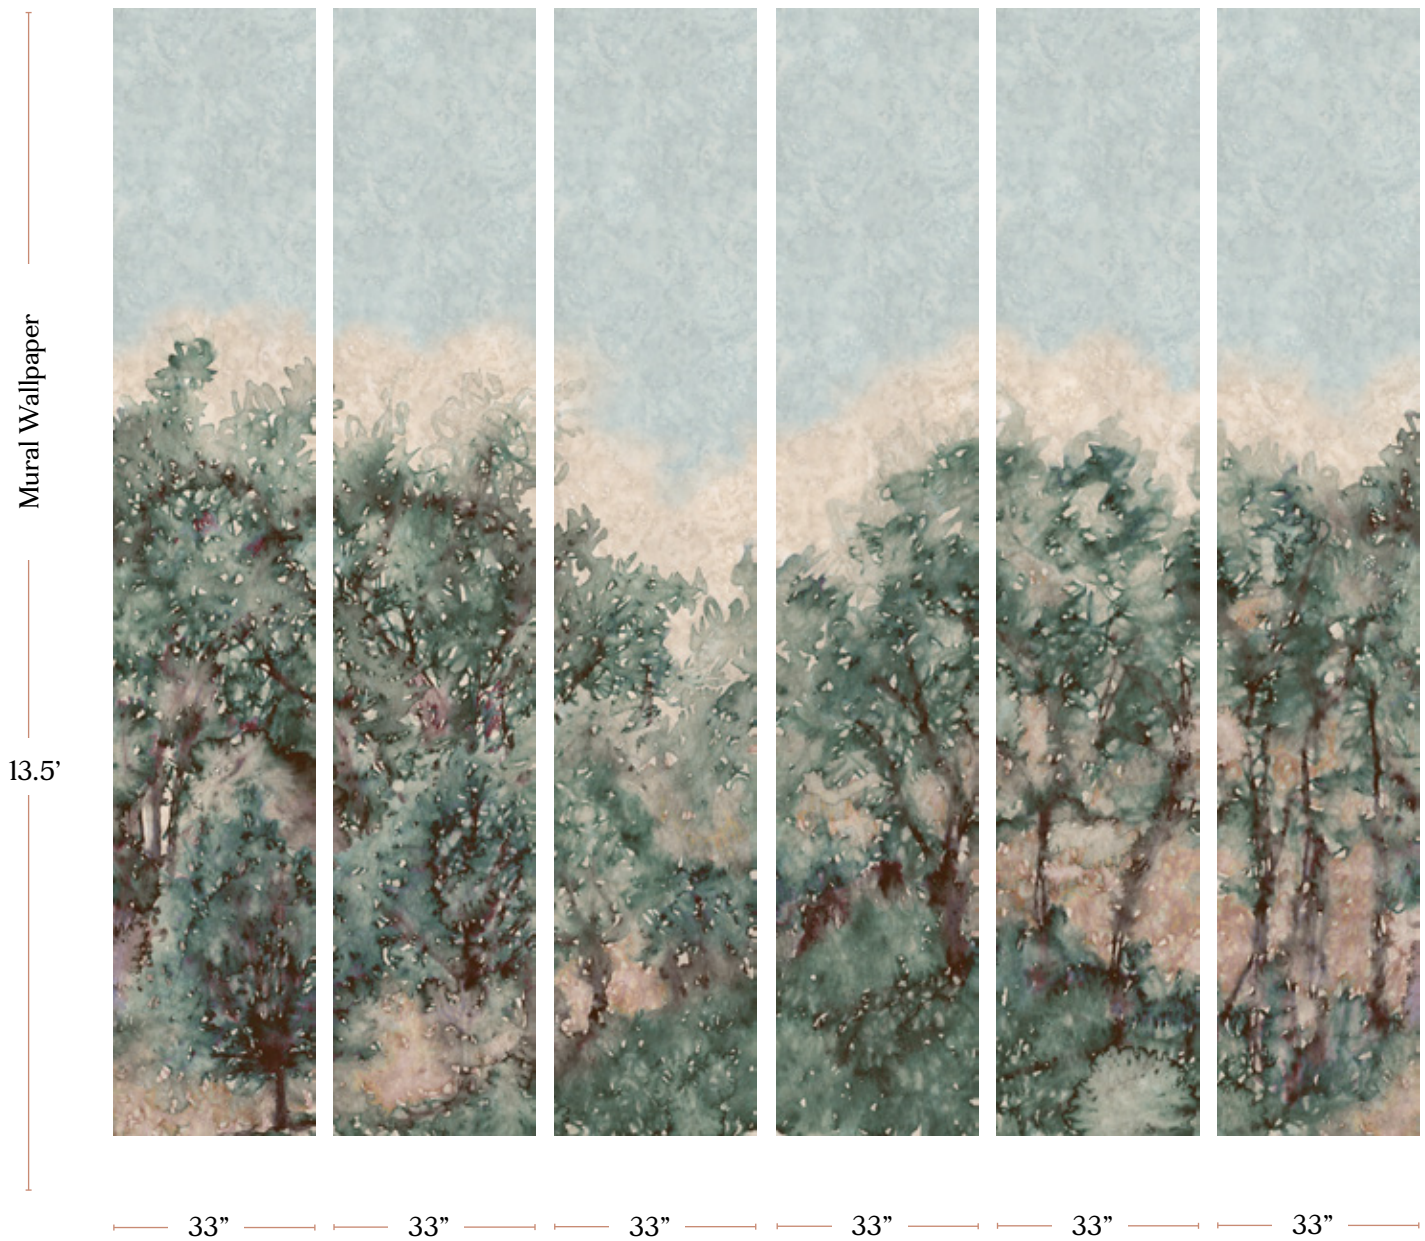

How to Measure the Amount of Paper to Order

**We always recommend confirming quantities with your wallpaper installer prior to ordering.

This Mural wallpaper is printed as 33" x 13.5' panels that can be trimmed to the ceiling height of your walls. A complete mural artwork is 6 panels wide (Panel A, Panel B, Panel C, Panel D, Panel E, Panel F). After 6 panels the artwork repeats horizontally ad-infinitum. Mural artwork does not repeat vertically.

When measuring ceiling height and room width, we recommend using a yardstick or steel tape measure. Be sure to exclude any baseboard or crown molding when measuring height, and only measure the area which will actually be covered by wallpaper. To determine the width, begin measuring at one corner and continue all the way across to the opposite corner, without omitting doors and windows. To ensure that you will have a bit of extra paper to work with, remember to round up to the nearest whole foot from whatever your width measurement is.

The height of the wall will be the length of the panels needed to cover the wall. Your installer will trim the 13.5' panels to the height of the wall. To find the number of panels needed to cover the width of the wall, divide the length of the wall in feet (rounded up) by 2.75 and then round up to the nearest full number. This calculation will give the minimum number of panels needed to cover the wall.

Example: For a wall that is 10 feet 5 inches high by 9 feet 6 inches long, round up the width of the wall to 10 feet. Divide the length of the wall (10 feet) by 2.75, round up, and you will get 4. In this case, you will need 4 panels and the wallpaper installer will trim the panels to the ceiling height (10 feet 5 inches). So in total you will need 4 panels which are 33" wide x 13.5 feet long.

Please feel free to contact us anytime for assistance in finalizing your calculation.

Silk Wallcovering Installation Guide

Eskayel highly recommends consultation with a professional paperhanger prior to installation.

These instructions are for our SILK wallcovering only.

Wall Preparation

The walls to be covered must be properly prepared to insure that the wallpaper will adhere to the wall surface. Even the strongest adhesive can only work when the wall surface is clean and properly prepared.

Building & Material Conditions

- The building must be weather-tight with HVAC settings (including pressure, temperature and relative humidity) the same as those of an occupied building for three days prior to, throughout installation and three days after installation.
- The walls must be structurally sound including elimination of sources of moisture accumulation into the wall or wall cavity.
- The wallcovering must be in a clean and dry condition and must be stored at normal occupied building temperature and humidity for at least three days prior to installation.
- All adhesives and primers must be new, good quality, commercial grade materials, which have not been contaminated.

Preparation

- Before you cut and hang, please be sure you have:
- The correct wallcovering and the correct amount of wallcovering to finish the job.
- Inspect the wallcovering carefully to ensure it is free of defects: If no defect is evident before installation, the material should be inspected after three (3) strips are installed. If any defect is evident at this time (or at any point in the installation) no additional material should be hung. **NO CLAIMS WILL BE ALLOWED FOR MORE THAN (3) STRIPS ON THE WALL.** All claims must be made within 30 days of the invoice date. No labor claims will be allowed at any time.

Adhesive

- We recommend using a clay adhesive.
- Apply the paste to the back of the paper, which will become flexible and easy to hang.
- Do not add excessive water to the paste as it may cause the backing paper to pull away from the front.

Trimming

- Please create your own precision edge on your work table or by making a double cut on the wall for the finest seam possible.
- Trim edges with a VERY sharp razor blade. **CHANGE YOUR BLADES OFTEN.**

Installation

- Plumb wall for first strip.
- Cut strips and allow extra material at the top and bottom for trimming. Hang strips in the same sequence as cut from master roll.
- After cutting the strips from two bolts, take a few minutes to shade the strips from light to dark to ensure the most even shading. The installer may reverse strips if they feel that it will produce the most even shading. Once you are satisfied with the shading from the first two bolts, cut and shade the balance of the rolls.
- Apply wallcovering to wall surface, smoothing out all bubbles with a soft brush or cloth.
- Do not use wooden or nylon seam roller as this can polish the surface.
- For vertical strand quality, smooth out bubbles in a direction parallel to the patterns, while paying attention to the fibers on the surface of the wallcoverings.

Important

- **DO NOT FOLD** this wallcovering while pasting or booking, as it is susceptible to potential wrinkling and creasing.
- Use a soft brush or cloth when hanging, so that you do not damage the face of the wallcovering.
- **DO NOT** allow paste or excessive water to stain the front of the wallcovering.
- Silk wallcoverings have a natural finish and may show some shade variation from strip to strip. As the wallcovering oxidizes, these variations should soften over time.
- Paste, trim and hang one strip at a time.
- Gently smooth the wallcovering using a plastic smoother in the direction of the fiber. Do not use a seam roller.